



To connect B-B,pull out pole A to the tlimited stop then tighten the plastic bolt. Same way to the pole #C-D.

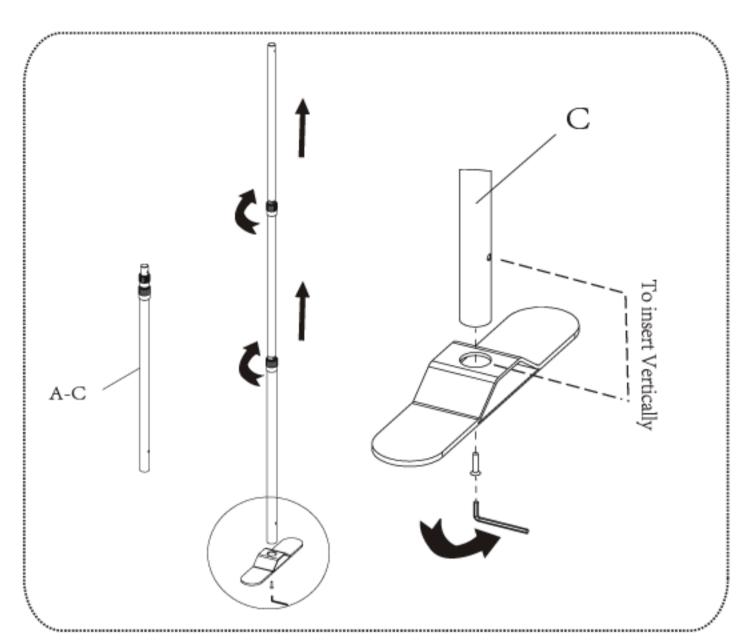

To insert pole #A-C into the socket of base vertically then tightening; Afterwards, screw off #A-C to the limited stop and screw up the plastic bolt.

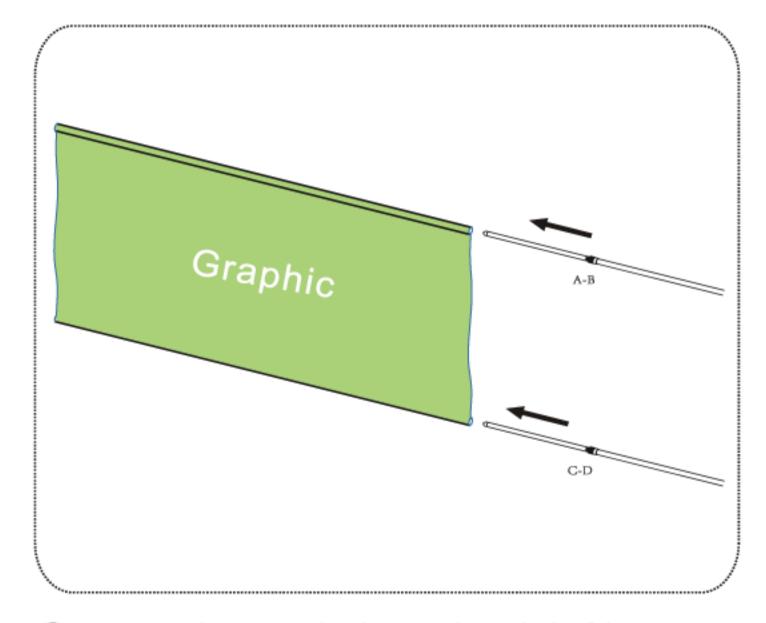

To put pole #A-B and pole #C-D through the fabric 4 To use right number of screw for tightening. banner hem.

Graphic

